

Modifying My Tab in Konica Minolta Printer Drivers

- My Tab allows every user to customize their printer driver to bring their most commonly used print settings to the front tab, eliminating the need to click on several tabs to set up print jobs.
- Some of the most common settings are placed on My Tab by default, such as Stapling (grayed out if your device does not have a finisher), Print Type to choose double siding, and Colour option if you have a colour device.
- Even when a driver is installed on a server each user can still customize My Tab on their computers without affecting all other users.
- When the driver is first installed there is a message box letting you know the items on the tab can be rearranged. Click on 'Do not show again' to create more space.
- To customize the tab click on Edit My Tab at the bottom of the screen. The pop up will display all the functions from each tab. If a function is already on My Tab there will be a blue icon next to it.

S TEST BH223 BH283 BH363 BH423 PS Printing Preferences					
Advanced 🧟 My Tab Basic Layout Finish	Cover Mode Stamp/Composition Qua	ity Other			
8 1/2x11 [215.9x279.4 mm]	Favorite Setting 🧱 Default Set	ting 🖌 Add Edit			
▼ 8 1/2x11 (215.9x279.4 mm)	This tab allows you to an	ange setting items as you like.			
	<u>M</u> ore Details	Do not show again			
	Original Orientation Original Orientation O Portrait O Landscape	Copjes 1 (19999)			
к1	Original Size				
	8 1/2x11	Print <u>T</u> ype			
	Paper Size Same as Original Size	1-Sided			
i f f e I		Stagle			
Printer View Printer Information	🧟 Edit My <u>T</u> ab	Default			
	OK I	Cancel Apply Help			

Basic Lavout Finish	Cover Mode	Stamp (Composition	Quality Other	
Layout Finish	Cover Mode	Stamp/Composition	Guancy Other	
Original Orientation				*
Orginal Size Paper Size				
Zoom [25400%]				E
Paper Tray				
Output Method				
Authentication/Acco	ount Track			-
\sim	-			
▼ to the LEFT		to the RIGHT		
		\smile		
👷 My Tab				
LEFT side		RIGHT side		\frown
Original Orientation	Co	pies		Un
Original Size	Of	fset		
Paper Size Output Method	Pr	nt Type anle		Down
ouput metriou	0.0	apic		Left/Right
				Leit/ Hight
				Remove

- To add a function to My Tab simply highlight it in the top list, then click on 'to the LEFT' or 'to the RIGHT.' The Up, Down, and Left/Right buttons on the right of the pop up screen allow you to arrange the functions any way you wish. The Remove button will remove the function from My Tab.
- > When finished click OK.