

Multimedia Classroom Quick Start Guide:

Turn the Projector On

1. Press control panel Display Power button. The green light beside the power button will flash during projector warm up cycle (90 seconds)
2. Once the green light stops flashing, select the source you wish to view by pressing the control panel button adjacent to it.

Switch between devices and “No Show”

1. Press the button adjacent to DVD/VCR, Portable PC (Laptop), Podium PC. The projector takes a few moments to synchronize to a new signal format.
2. The “No Show” button blanks the projector display. Press the button once to blank the display image, press the button a second time to restore the display.

Connecting a Laptop

1. Connect the VGA cable to your laptop video connector (contact Media Services if you require an adaptor).
2. Connect the 3.5mm Audio Cable, if required, to your Laptop audio output.
3. Connect the Network Ethernet cable to your laptop if required.
4. Some laptops require the user enable the VGA output using a function (Fn + Function) key combination consult your laptop owners manual.

Volume


Adjust the volume level of the selected source by turning the volume control on the control panel.

Turn the Projector Off

1. To shut the projector power off, press and hold the display power button for 2 seconds, the green light will flash while the projector powers off and cools down.



Control Panel

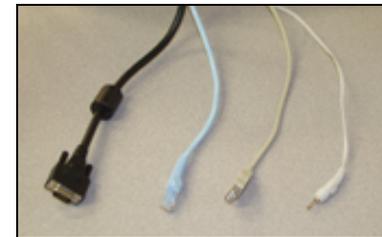

VGA, Audio, Ethernet, & USB cables

Controlling the DVD/VCR

Use the front panel controls on the DVD/VCR deck, or the DVD/VCR remote to control Play, Rewind, FF functions.

If you require assistance contact **Help Desk at 828-5320** or **Media Services 828-5336** or after hours **371-5880**